

REGAL DRAPES


Motorized Roman Shades Instructions

Charging Instructions

The battery pack included in the roman shade provides approximately 6 month's of use when fully charged(This estimate will vary based on shade size, fabric weight & frequency of use. A detached charging cord is included. Plug in and attach the cord to the roman shade to charge the shade battery (approximately 4 hours to full charge). Charge the roman shade prior to first use.

5 Channel Programmable Remote

The 5 Channel Remote can be used manually, or programmed to automatically raise and lower the roman shades at pre-set times of day and week. The default setting is manual which allows each roman shade to be operated separately. All Roman Shades can be raised and lowered at the same time by pressing the < or > several times until all 5 roman shades are selected.

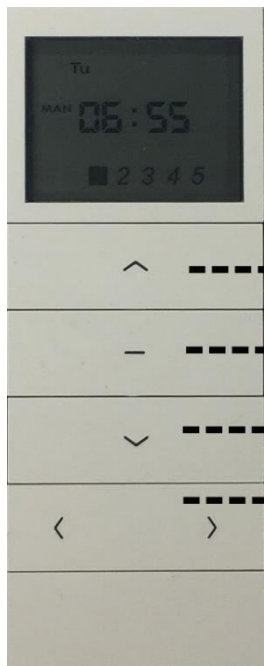


Pressing the Up button will raise the shade to the uppermost position.

Pressing the Stop button at any point during operation will stop the shade in place.


Pressing the Down button will lower the shade to the bottom most position.

The < and > Buttons Switch between the Roman Shades (1-5). Pressing the > button past the 5th channel will select all Roman Shades at once.

Display

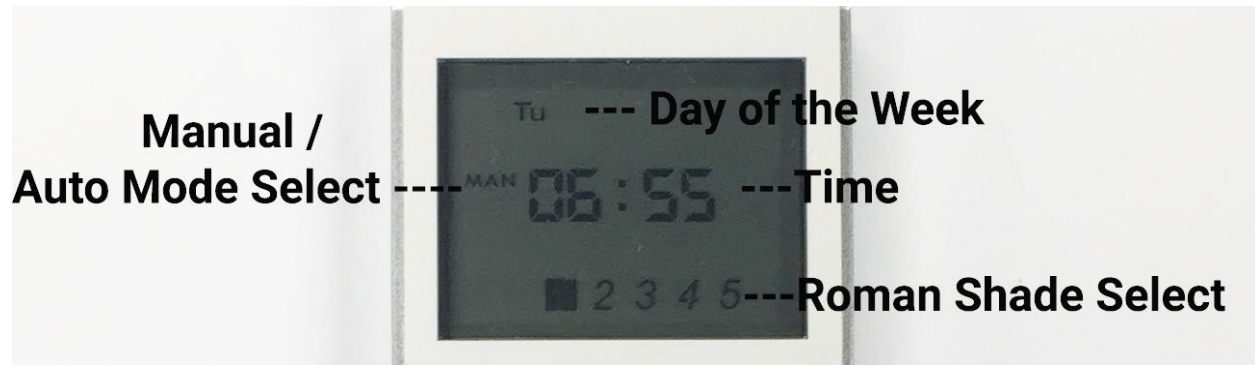

Setting Time

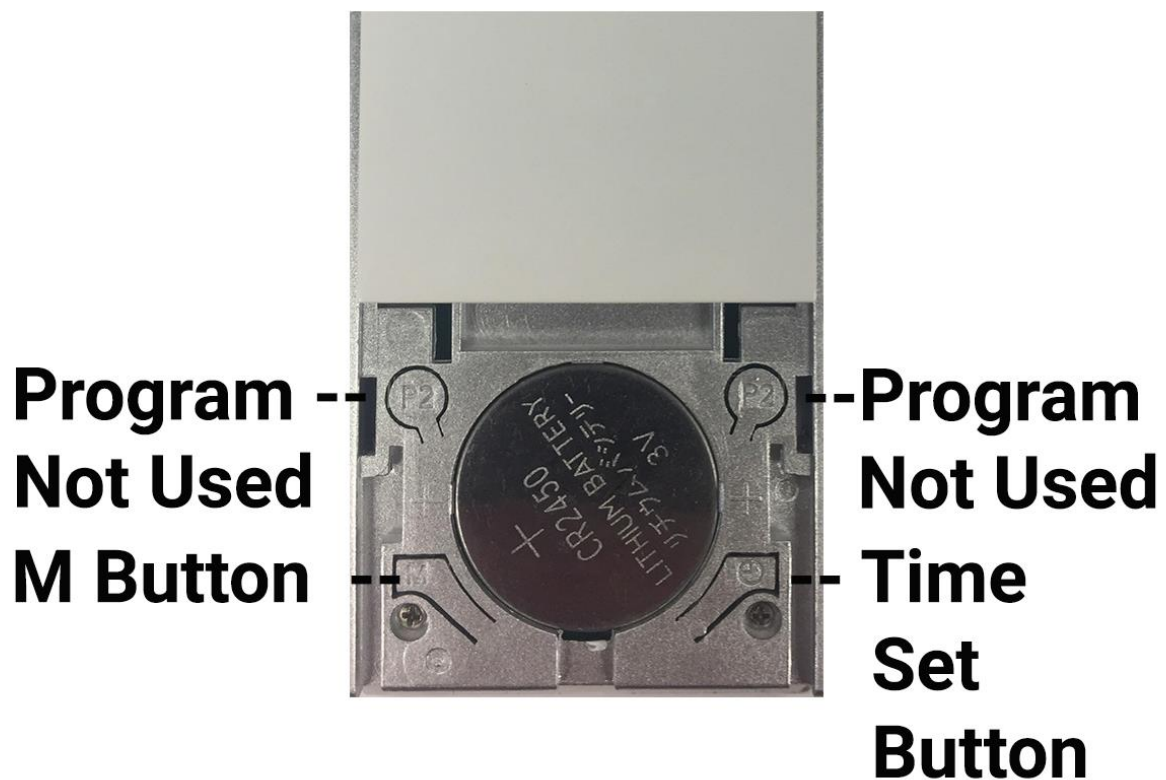

To set the time, remove the battery, set to Manual Mode, remove cover off the back and follow these steps:

- 1) Press and Hold the “Time Set Button” for 3 seconds (Hour will start blinking)
- 2) Use Up and Down button to adjust the time.
- 3) Use < and > To switch between hour, minutes and day of week.
- 4) After 4 seconds of no changes the time will be set

Programming Auto Raise / Lower Function

The remote can be programmed to raise and lower each roman shade at a set time and day of the week. To use the automatic function the remote must be set at “Auto” (done by pressing the “M Button” on the back of the remote.)

1. With the Remote Set to “Auto” Function – Press and hold the “Time Set Button” for 3 seconds.
2. Once time starts blinking, adjust the Raise time using the Up and Down button. Use < and > to switch between hours and minutes
3. Once Set – Press the M button on the back of the remote to switch to Lower Mode Time.
4. Adjust the Lower Time using the Up and Down button. Use < and > to switch between hours and minutes.
5. Once complete press Time Set Button to confirm. (this will cycle for all days of the week).
6. Once finished hold down Time Set Button for 3 seconds to save all settings.
7. Leave the Remote on “Auto” mode and it will follow the set program.

Warranty

The motor and battery pack are covered by a 5-year limited warranty as long as the product is installed according to instructions. Regal Drapes reserves the right to repair or replace the unit at their discretion. For more information please visit our website at www.regaldrapes.com.

Questions

For any questions or support please call our customer service at 1-800-256-5005 or email customercare@regaldrapes.com.