




Motorized Roman Shades Instructions

Charging Instructions

The battery pack included in the roman shade provides approximately 6 months of use when fully charged (This estimate will vary based on shade size, fabric weight & frequency of use). A detached charging cord is included. Plug in and attach the cord to the Roman shade to charge the shade battery (approximately 4 hours to a full charge). Charge the Roman shade prior to first use.

5 Channel Programmable Remote

The 5 Channel Remote can be used manually or programmed to automatically raise and lower the Roman shades at pre-set times of day and week. The default setting is manual which allows each Roman shade to operate separately. All Roman shades can be raised and lowered at the same time by pressing the > or < buttons several times until all 5 Roman shades are selected.

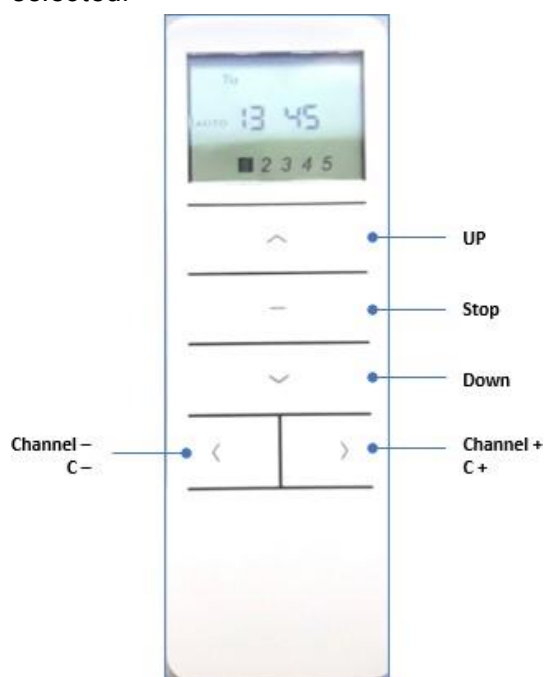

Pressing the Up button will raise the shade to the uppermost position.

Pressing the Stop button at any point during operation will stop the shade in place.

Pressing the Down button will lower the shade to the bottom most position.

The < and > Buttons Switch between the Roman shades (1-5). Pressing the > button past the 5th channel will select all Roman shades at once.

Display



Setting Time & Programming Buttons

(remove back cover for access)



Remove cover off the back for:

- Setting the Time
- Replacing the Battery
- Switching between Manual or Auto Mode
- Programming the Auto Raise / Lower function

Setting Current Time & Weekday

1. Briefly press the Mode button to set remote control to the Manual Mode. Letters "MAN" should be displayed on the screen.
2. Press and hold the Time Set button for 3 seconds until the Hour starts flashing. Use Up or Down buttons to adjust the hour.
3. Briefly press C+ button and minutes start flashing. Use Up or Down buttons to adjust the Minutes.
4. Briefly press C+ button and the Day start flashing. Use Up or Down buttons to adjust the Day.
5. Press and hold the Time Set button for 3 seconds until the whole time starts flashing.
6. Briefly press the Time Set button again. Time is set.

Programming Auto Raise / Lower Function

The remote can be programmed to raise and lower each Roman shade at a set time and day of the week. To use the automatic function the remote must be set at Auto by pressing the Mode button on the back of the remote.

All steps below must be performed within 60 seconds after the previous step, otherwise remote will go out of the programming mode.

Selecting Daily Schedule Type

1. Make sure that the remote is set to the Auto Mode.
2. Press and hold the Time Set button for 3 seconds until all weekdays start flashing. Use C+ or C- buttons to select correct schedule type:
 - All days are flashing (recommended) – shade will raise or lower at the same time every weekday.
 - Mon-Fry are flashing - separate timing can be set for weekdays and weekend.
 - Only “Su” is flashing – each day will have a unique schedule.
3. Briefly press Stop button.

Setting the Auto Raise / Lower time

(The transmit icon  indicates whether the Raise or Lower time is currently being set)

4. Use Up and Down button to adjust the Raise Hour setting.
5. Briefly press C+ button to go Raise minutes adjustment.
6. Use the Up and Down buttons to adjust the Raise Minutes.
7. Briefly press C+ button to go Lower Hour adjustment.
8. Use Up and Down button to adjust the Lower Hour setting.
9. Briefly press C+ button to go to Lower minutes adjustment.
10. Use the Up and Down buttons to adjust the Lower Minutes.
11. Briefly press C+ button.
12. Press and hold the Time Set button for 3 seconds to confirm your settings. Your timer is set.

If you are setting for Mon-Fry, weekend, or individual days schedule - step #11 will continue with the next schedule period or day.

Warranty

The motor and battery pack are covered by a 5-year limited warranty if the product is installed according to instructions. Regal Drapes reserves the right to repair or replace the unit at their discretion. For more information, please visit our website at www.regaldrapes.com.

Questions

For any questions or support please call our customer service at 1-800-256-5005 or email customercare@regaldrapes.com.