



REGAL DRAPES™

Thank you so much for choosing Regal Drapes.

Every Regal Drapes piece is made to order with meticulous attention to proportion, materials, and finish. From the moment a fabric is chosen to the final handcrafted construction, each element is refined with intention, resulting in pieces that feel timeless, sophisticated and enduringly elegant.

Please feel free to contact us at 800.256.5005, or customercare@regaldrapes.com, should you have any questions or concerns. We are more than happy to help!

Thank you for placing your trust in Regal Drapes.

With Our Compliments,
The Regal Drapes Team

(800) 256-5005
1 Cory Rd, Morristown, NJ 07960
www.regaldrapes.com

Pleated Drapery Instructions

Getting Started: Please review instructions carefully, before you begin installation.

BEFORE YOU BEGIN


Please Note:

Drapery pins, Euro hooks or metal pins, come pre-installed on the back of each pleat. Both Eurohook and metal drapery pins can be adjusted to raise or lower the drape height as needed. Tenterhooks, which are included with your instructions, are necessary for attaching the outer sides of your drapes so they can return back toward the wall. Please check that no pins have detached during shipping before hanging the drapes.

PLEATED DRAPERY INSTALLATION STEPS

Step 1: Unpacking and Sorting Drapes

Unpack all drapes and sort them by window, if you have more than one pair. Pairs of drapes will be labelled “Left” or “Right” on the return sides.

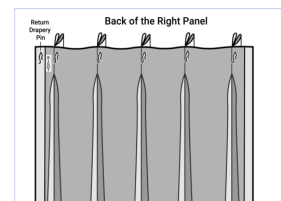

Step 2: Installing Drapes on the Rod


The outer rings sit between the finial and bracket. Attach the second-to-last drapery pin to the outer ring. Then continue hanging the panel toward the center. Leave the first (outermost) pin unattached for the wall hook. Refer to Step 3 for attaching the leading-edge (center) pin.

PLEATED DRAPERY INSTALLATION STEPS

Step 3: Adjusting Drapery Pins Height

Adjust the drapery pin position if needed. The Eurohook can be adjusted in ¼” increments. Pull the pin down and reinsert it from the top, until you’ve reached the desired height.

To adjust the metal drapery pins, simply take it out and reinsert it higher or lower, using the original insertion hole as a guide. Be aware of the sharp pin at the end.

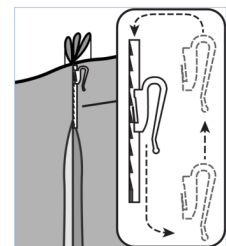


Step 4: Installing Wall Hooks

Screw the hooks into the wall, at the same height as the drapery pins.


Position each hook so that the outermost fold is neatly in place, creating a finished appearance when the drapes are open. Proper placement will also help minimize light gaps between the drapery and the wall, improving light control and privacy.

We recommend pre-drilling a pilot hole with a 1/16” drill bit before installing the screws. If additional support is needed, you may use the included #4 wall anchor, by first drilling a 3/16” hole, inserting the anchor, and then securing the screw.

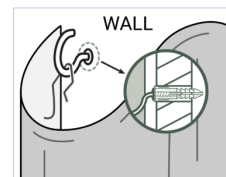


Step 5: Installing Tiebacks (If Included)

Wrap the tieback around the drape approximately halfway down the panel, then adjust it until you achieve the desired look. Secure the tieback once you have found the ideal position.

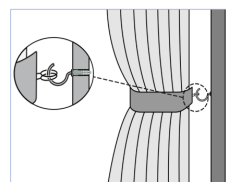

Step 6: Attaching Drapery Wand (If Included)

Attach the wand to the first leading center ring, as shown.

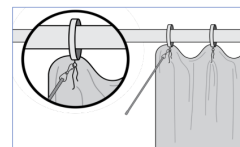

DRESSING & TRAINING DRAPERY FOLDS

Applies to Pinch Pleat, Tailored Pleat, and Goblet Pleat

Dressing your drapes helps create memory in the fabric, allowing the folds to form consistently each time the drapes are opened or closed. Lighter fabrics typically require 2-3 days to develop memory, while heavier fabrics or drapes with interlining may take up to two weeks. During this period, we recommend keeping the drapes in the open position and avoiding closing them to allow the folds to set properly.

Step 1: Start Dressing your Drapes

Begin with the outermost ring, as it is secured between the finial and the bracket.

Step 2: Form the Folds


Hold the pleats together and gently press the fabric between the pleats toward the wall. To define the folds, run your fingers down each side of the pleat, smoothing the fabric as you go. Continue shaping the folds behind each pleat, working toward the center of the drape.

Step 3: Secure the Folds

Use a ribbon or soft rope to gently tie the folds together near the drapery pins.

While the top of the drape is secured, shape the folds all the way down to the floor. Tie the drape loosely at the middle and bottom to help maintain the folds from top to bottom. This process encourages the fabric to develop and retain its shape, whether the drapes are open or closed.

Leave the drapes tied for several days to allow the folds to set properly.

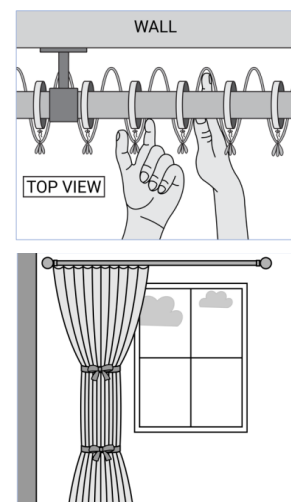

DRAPERY CARE

Once the draperies are installed and dressed, most wrinkles and folds will hang out on their own within 1-2 weeks. A garment steamer may also be used to help smooth out the wrinkles. Please take care not to overheat the fabric while removing wrinkles. You can also use a wrinkle release spray like Downy Wrinkle Releaser.

Certain fabrics, like silks or linens, have natural characteristics that steaming will not remove.

The Regal Drapes Team