


REGAL DRAPES

Roman Shades Installation Instructions - Inside Mount

Included Hardware

- Mounting Brackets – We have provided you with 1 bracket for every 16" in length for your Roman Shade
- 1" Wood Screws – 1 per bracket for shades less than 60" wide. 2 per bracket for shades wider than 60".

Tools Required

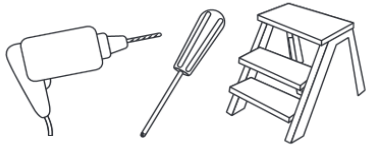


Cordless Drill, Screw Driver, Step Stool, Pencil


Step 1 – Mount Brackets

Note the orientation of the bracket below:

Mounting Bracket

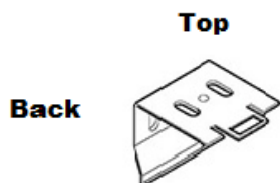

The depth of the top section of the bracket, represents the depth of your roman shade. (This depth is 1 5/8" for units under 60". For units wider than 60" projection is 2 3/4")

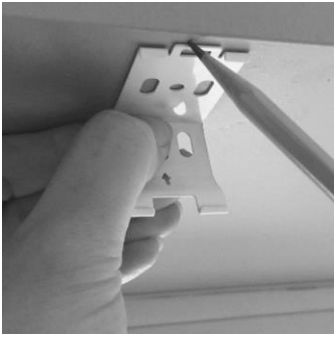

Hold your bracket up to the underside of your window frame for the window you plan to install the roman shade.


Placement of your bracket sets the projection of your roman shade in the window.

Use a pencil to mark the same spot for the brackets across the window.

Place a bracket 2 inches from each edge of the window and a center bracket. For shades wider than 40", place 2 evenly spaced center brackets.

Roman Shade Installation

Raise the Roman Shade in up position and insert into the bracket. Position the shade so that the front is lowered, and insert it onto the mounting brackets (rear first, then raise front). Once you hear a "click" the Shade will be secure. A light pull on the shade will determine if it is in place.

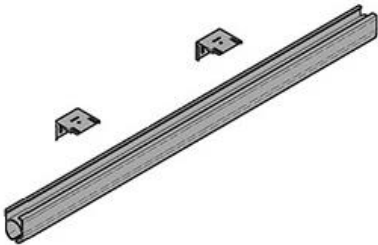

Tension Device

The tension device aids in reducing the hazard of strangulation and entanglement of young children or pets by limiting access to the control cord.



Install the Tension Device – Anchor the Tension Device to the window frame or wall (instructions enclosed). For hollow dry wall installation use the enclosed anchors.

"Dressing" your Roman Shade

Some roman shade styles, especially those made of heavier fabrics will require "dressing" when raised or lowered. This means you may have to "train" the fabric to lay properly by hand when adjusting the shade. Over time many fabrics develop memory and will no longer require to be dressed.

Shade Care Instructions

Once the shade has been installed, any wrinkles will hang out on their own within 1 – 2 weeks. A garment or commercial steamer may also be used to help smooth out the wrinkles. Clean shade with a vacuum attachment (covered with nylon or cheesecloth).

Questions Comments

Our dedicated customer service team is available to help. Contact us at 1-800-256-5005 or email at customercare@regaldrapes.com.