




REGAL DRAPES

Roman Shades Installation Instructions - Inside Mount

Included Hardware

Romans Shade Width	Number of Brackets	Number of Screws	
		1 5/8" Deep Track	2 1/2" Deep Track
36" and below	2	2	4
36 1/8" to 72"	2-3	2-3	4-6
72 1/8" to 108"	3-4	3-4	6-8
108 1/8" to 144"	4-5	4-5	8-10
Over 144 1/8"	5-6	5-6	10-12


Tools Required

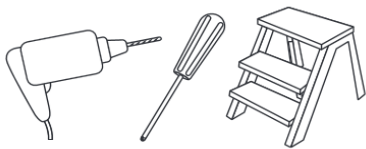

Cordless Drill, Screwdriver, Step Stool, Pencil

Step 1 – Mount Brackets

Note the orientation of the bracket below (*The top of the bracket has the letter "V" on it*):

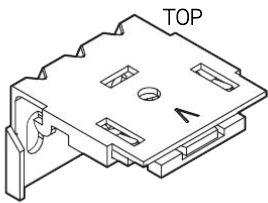

The depth of the top section of the bracket, represents the depth of your Roman shade. 1 5/8" deep brackets will be included with most sizes of Roman shades.






Hold your bracket up to the underside of your window frame for the window you plan to install the roman shade.

The placement of your bracket sets the projection of your roman shade in the window.

Use a pencil to mark the same spot for the brackets across the window. This spot is where the screw will be inserted to secure the bracket to your window.


Step 2 - Install Roman Shade

Insert the Roman Shade track into the mounting brackets (front first, then push the back of the track up towards the bracket). Once you hear a "click" the Shade will be secure.

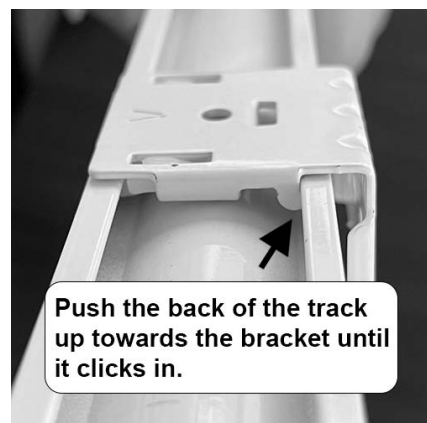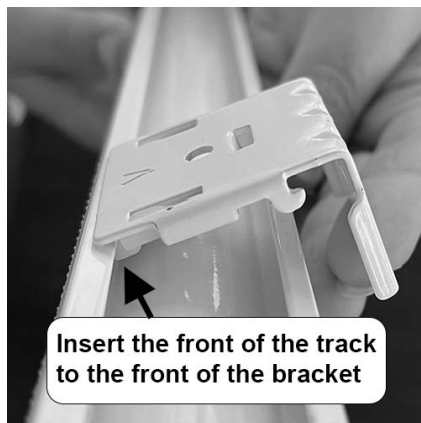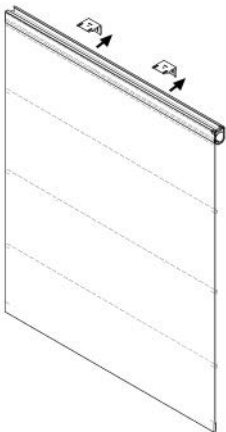

Tension Device

The tension device aids in reducing the hazard of strangulation and entanglement of young children or pets by limiting access to the control cord.

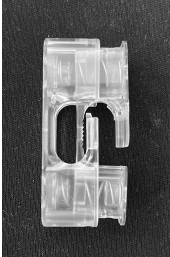

Install the Tension Device – Anchor the Tension Device to the window frame or wall (instructions enclosed with device). For hollow dry wall installation use the enclosed anchors.

“Dressing” your Roman Shade

Some roman shade styles, especially those made of heavier fabrics will require “dressing” when raised or lowered. This means you may have to “train” the fabric to lay properly by hand when adjusting the shade. Over time many fabrics develop memory and will no longer require to be dressed.

Shade Care Instructions

Once the shade has been installed, any wrinkles will hang out on their own within 1 – 2 weeks. A garment or commercial steamer may also be used to help smooth out the wrinkles. Clean shade with a vacuum attachment (covered with nylon or cheesecloth).

Questions Comments

Our dedicated customer service team is available to help. Contact us at 1-800-256-5005 or email at customercare@regaldrapes.com.